



NOTE: WHEN USING A THEN B ET ENABLE OPTION, VALVES CONNECTED TO THE "A" COMMON WATER ONE DAY THEN VALES ON THE "B" COMMON WATER THE NEXT DAY

WEATHER REACH RECEIVER - ET ENABLE